



ERWIN SATTLER
MÜNCHEN



CLASSICA LUNARIS

Armbanduhr Wristwatch

Das Aufziehen der Uhr

Ziehen Sie das Uhrwerk auf, indem Sie die Krone im Uhrzeigersinn drehen. Im Normalfall reichen circa 30 Kronenumdrehungen.

Bei täglichem Tragen sorgt die Automatik der Uhr (unter normalen Bedingungen) für den weiteren Aufzug. Die Gangreserve ermöglicht es Ihnen, die Uhr über Nacht abzulegen, ohne sie erneut aufziehen zu müssen.

Einstellen der Uhrzeit

Ziehen Sie die Krone von der Ausgangsposition in die Endposition. Das Uhrwerk wird angehalten (Sekundenstop). Dies hilft Ihnen, die Uhr sekunden genau einzustellen. Um sicher zu gehen dass der Mond nicht mittags sondern um Mitternacht schaltet, drehen Sie die Zeiger vorwärts bis der Mond einmal schaltet. Anschließend stellen Sie die Uhrzeit ein. Wir empfehlen Ihnen, den Zeiger über den gewünschten Minutenstrich hinaus zu drehen und auf dem Rückweg einzustellen.

Das Uhrwerk wird wieder in Gang gesetzt, sobald Sie die Krone in die Ausgangsposition drücken. Nur eine korrekt sitzende Krone gewährleistet die angegebene Wasserdichtigkeit.

Einstellungen für den Uhrenbeweger

Sollten Sie die Uhr länger als die angegebene Gangdauer nicht tragen, kann das Uhrwerk durch das Einlegen in einen Uhrenbeweger automatisch aufgezogen werden.

Umdrehungen pro Tag: 800

Drehrichtung: rechts

Unsere Rotalis Uhrenbeweger Kollektion finden Sie unter:

www.erwinsattler.de oder scannen Sie den QR Code



Einstellen der Mondphase


WICHTIG: Der Schaltvorgang der Mondphase dauert 4 Stunden, bitte verstellen Sie die Mondphase daher niemals zwischen 24⁰⁰ und 4⁰⁰ Uhr, oder falls Sie den Mond mittags schalten lassen, zwischen 12⁰⁰ und 16⁰⁰ Uhr!

Die Schnellverstellung der Mondphase erfolgt über den im Gehäuse eingelassenen Drücker bei der „4-Uhr“-Position. Bitte verwenden Sie hierzu nur den mitgelieferten Holzstift.

Durch jeden Druck verstellt sich die Mondphase um genau einen Zahn und somit um genau einen Tag.

Stellen Sie die Mondphase so ein, dass sie exakt Vollmond oder Neumond anzeigt.

Nun können Sie durch entsprechendes Drücken die Tage seit dem letzten Voll- bzw. Neumond einstellen.

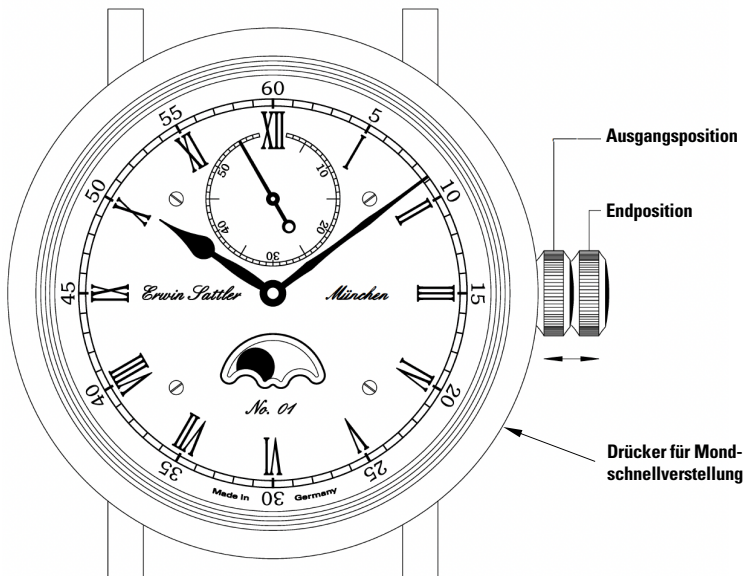

Technische Daten

Gehäuse	Edelstahl mit polierter Lünette, Ø 44 mm, Höhe 15,3 mm Schraubboden mit Vollgewinde
Glas	Gewölbtes und entspiegeltes Saphirglas vorne, gewölbtes Saphirglas im Boden
Armband	Handgenähtes Vollumbug-Lederband, Drucktasten-Faltschließe aus Edelstahl mit Sattler-Gravur
Zifferblatt	Silbernes Zifferblatt, handbemalte Mondphase, springende „Kleine Sekunde“, fortlaufende Nummerierung
Zeiger	Stahl, poliert, thermisch gebläut, bombiert
Uhwerk	Sattler Kaliber ES 07, Basis Kaliber, Automatik ETA Valjoux 7750, Ø 30 mm, Unruh-Halbschwingungszahl 28.800 A/h
Gangdauer	42 Stunden
Rubinlager	28 Rubine
Dichtigkeit	Wasserdicht bis 5 bar
Rotor	Handgraviert, skelettiert und guillochiert, auf Wunsch mit den Initialen des Besitzers veredelt



ERWIN SATTLER
MÜNCHEN

Wartung

Wir empfehlen Ihnen, Ihre Erwin Sattler Armbanduhr alle 3–5 Jahre einer Uhrmacher-Meisterwerkstätte zur Revision zu übergeben. So werden Sie viele Jahrzehnte Freude an Ihrem Zeitmesser haben.

Erwin Sattler GmbH & Co. KG

Großuhrenmanufaktur
Lohenstraße 6 · D - 82166 Gräfelfing
Tel. +49 (0)89 / 89 55 806-0 · E-Mail: info@erwinsattler.de
www.erwinsattler.de

Winding up the watch

Wind up the movement by turning the crown clockwise. Normally, about 30 crown rotations are sufficient.

When worn daily, the automatic of the watch (under normal conditions) provides for the further winding up. The power reserve allows you to store the watch overnight without winding it.

Setting the time

Pull the crown from the basic position to the end position. The movement will be stopped (stop seconds). This helps you to set the watch to the exact time. To make sure that the moon does not switch at noon but at midnight, turn the hands forward until the moon switches once. Then set the time. We recommend you to turn the hand a bit further than the desired minute index and set it by turning back.

The movement will start again as soon as you push the crown back to the basic position. Only a correctly fitted crown ensures the specified water resistance.

Settings for the watch winder

If you do not wear the watch for longer than the specified power reserve, the movement can be wound automatically by placing it in a watch winder.

Rotations per day: 800

Direction of rotation: right


You can find our Rotalis watch winder collection at:
www.erwinsattler.de or scan the QR Code



Setting the moonphase

CAUTION: The changing process of the moon phase takes 4 hours, so please never adjust the moon phase between 24 and 4 am or between 12 and 4 pm, if you have set that moon changes at noon!

The quick adjustment of the moon phase is done by pressing the pusher in the case at „4 o'clock“. Please use only the wooden pin provided. Each press adjusts the moon phase by exactly one tooth and thus by exactly one day. Set your moon phase so that it shows exactly the full moon or the new moon. Now you can set the days since the last full or new moon by pressing accordingly.

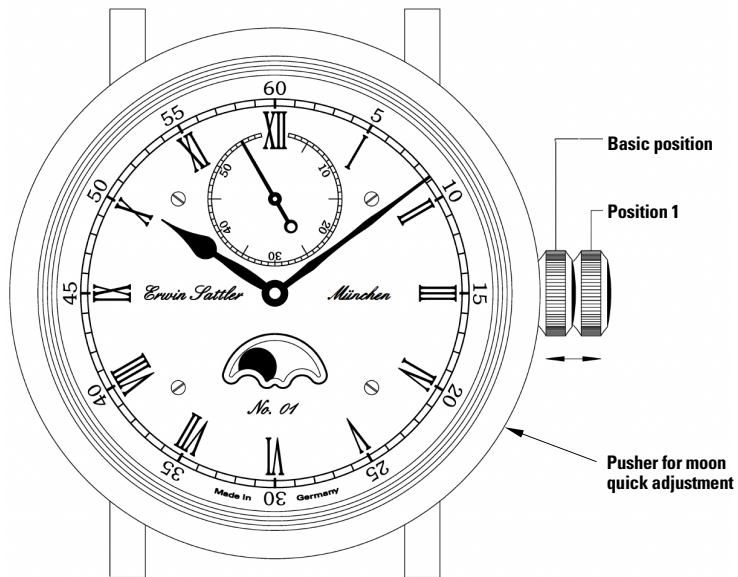

Technical Data

Case	Stainless steel with polished bezel, Ø 44 mm, height 15,3 mm, screw base with full thread
Crystals	Domed and anti-reflective sapphire crystal in the front, domed sapphire crystal in the back
Strap	Hand-sewn rembored leather strap, stainless steel folding clasp with Sattler engravement
Dial	Silver dial, hand-painted moon phase , jumping „small second“, consecutive numbering
Hands	Steel, polished, thermal blued, domed
Movement	Sattler calibre ES 07, Basic calibre, self-winding, ETA Valjoux 7750, Ø 30 mm, beat rate 28.800 A/h
Power reserve	42 hours
Jewels	28
Water resistance	Up to 5 bar
Oscillator	Engraved by hand, skeletonized and decorated with guilloche work Option: customized oscillating weight with own initials



ERWIN SATTLER
MÜNCHEN

Service

We recommend you to service your Erwin Sattler wristwatch by a master watchmaker every 3 – 5 years.

You will be able to enjoy your timepiece for many years to come.

Erwin Sattler GmbH & Co. KG

Großuhrenmanufaktur
Lohenstraße 6 · D - 82166 Gräfelfing
Tel. +49 (0)89 / 89 55 806-0 · E-Mail: info@erwinsattler.de
www.erwinsattler.de